





RALEIGH ONE DISPLAY USER GUIDE

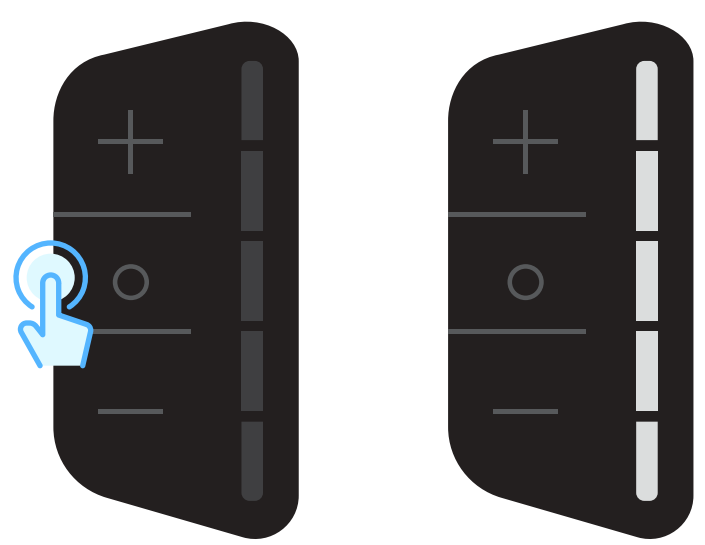


SWITCH ON

Press 0 & the screen will light up in white from bottom to top. Each bar means about 20% charge.

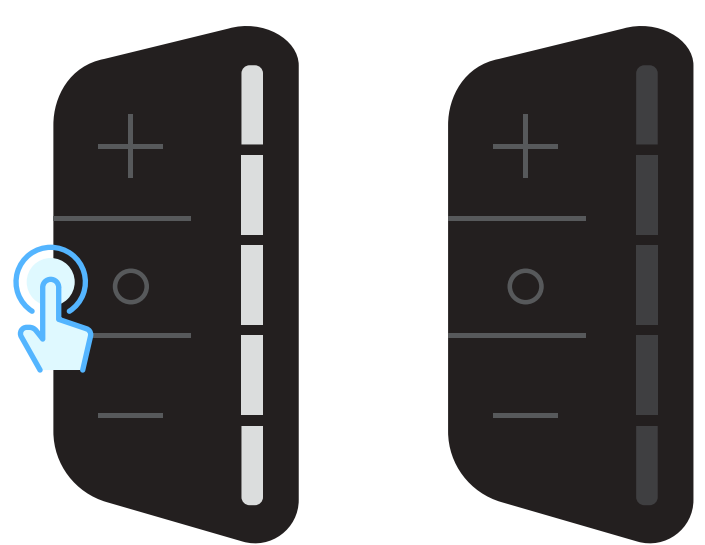


SWITCH OFF

Press 0 and the display will fade out from top to bottom.

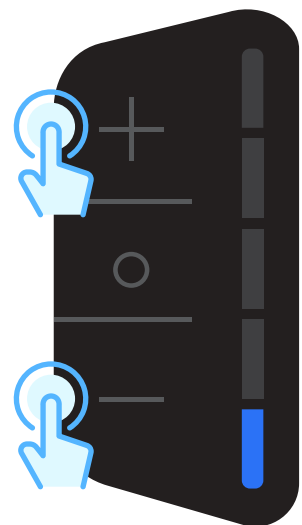

SEE & ADJUST SUPPORT LEVEL

Press + or - once. The screen will show the support level in blue (from one to five). You can adjust the support level using + and -.

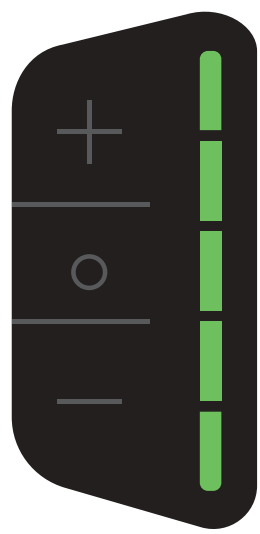


BIKE ARMED

A green flash means your Raleigh ONE is armed. Unlock it with the app or enter your 3-digit unlock code to ride.




DISARM THE BIKE WITH THE UNLOCK CODE

1. Press & hold 0 for a couple of seconds. The first bar will start blinking green.
2. Enter the first digit of your code:
 - Press + until you reach the correct number (for example, press + three times for "3").
 - A solid green bar means the digit is confirmed.
3. Repeat the process for the remaining digits.
4. When all three digits are entered correctly, your bike will unlock.

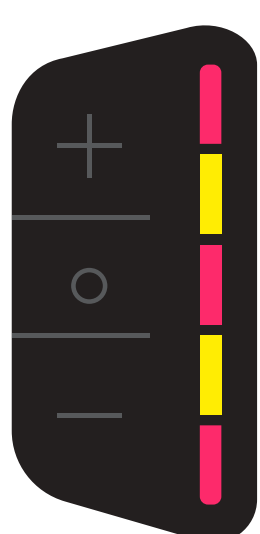


BIKE MOVED ALARM

When your bike is moved in armed state, the display will flash in red & amber.

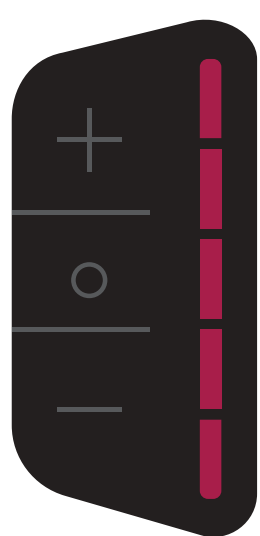


FIRMWARE UPDATE

A magenta light means a firmware update is in progress. Support may pause during this time, so it's best to let the update finish before you ride.

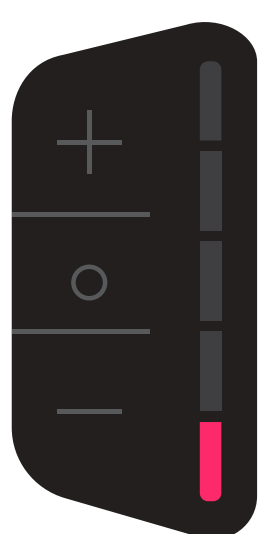

LOW BATTERY

One red bar means you're under 5% battery. Time to charge—unless you're up for turning your e-bike into a good old push bike.

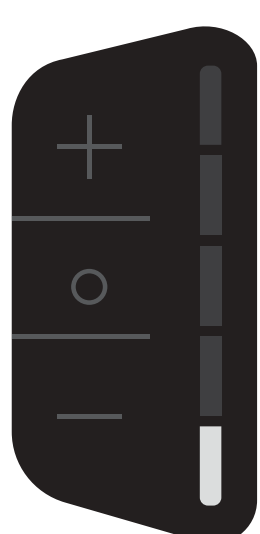

CHARGING

While charging, the display blinks in white.

ENJOY YOUR
CONNECTED BIKE.



TWO
WHEELS
FOREVER.